

DP Cable Clack Valve

External control cable V3473

DP CABLE CLACK VALVE

EXTERNAL CONTROL CABLE FOR CI ELECTRONIC VALVES

DP CABLE V3473

External control cable V3473

Depending on the configuration of the electronics, the DP cable can be used to :


- Prevent regeneration of a softener or filter washing
- Trigger regeneration of a softener (with residual hardness analyser for example) or a filter (with differential pressure switch for example) (contact must be maintained for 3 minutes to be taken into account).



DP cable



DP connector : at the top right of the CI electronic card

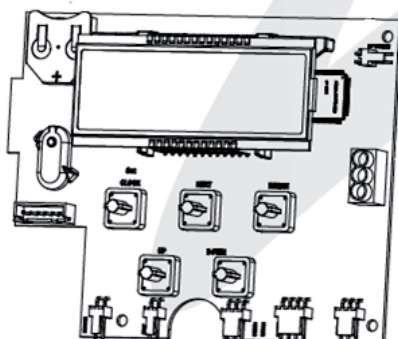

external control